



6 rue des Hauts Musats
89 100 SENS
Phone Number :
+33 (0)3 86 83 08 78
Email : c-et-m@wanadoo.fr

THE NEWSLETTER

April 2011

REX C&M

Authors : Denis Mondière and Olivier Vanackère

Assembly of the SHANNON device

Problematic

Securing the Shannon device on electric cable:


I Installation of the motorization part in safety :
Fix strap with carabiner on the conductor and hook the carabiner on the grip cable of the device. Place the motorization part beneath the pulley on the conductor. Set up mechanical security and remove the carabiner from the grip cable.



II Installation of the acquisition part in safety :
Hook carabiner on the grip cable on device. Place the acquisition part beneath the pulley on the conductor. Set up mechanical security, remove the carabiner from the grip cable and conductors strap.



III Assembly of the different parts:
Mechanically connect the two parts of the SHANNON device.

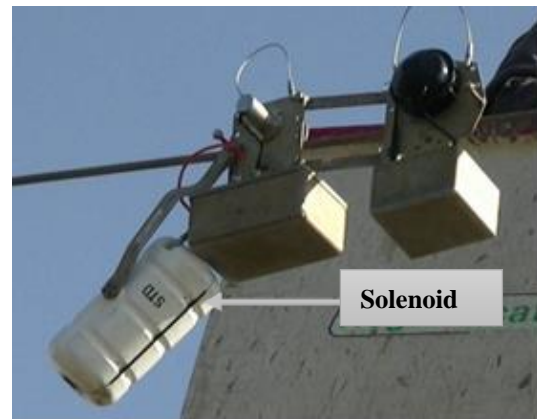

IV Installing of the solenoid :
Open the solenoid using the two cords, place this one on the phase and close the solenoid, the acquisition can start.

